

Replace / Remove Filter – Airsep New Life intensity 10L

Turn off and unplug the unit :)

On the right side panel - facing the front...

The small 'flat-head' screw turns counter-clockwise about a 1/4 turn to release the panel. Don't remove it - The screw stays in the panel when its released.

The panel removes outwards.



With the panel removed, locate the white felt 'donut' filter.

It is located on a vertical air-intake shaft.

Slide the filter upwards to remove.

This filter should be replaced every 5000 to 6000 hours.

